


# Instruction Flomatic Push button panel.



Split the lever to remove it.



Remove the philips screw and lift the lid. Carefully turn the microswitch so that it's facing forward. Replace the lid.

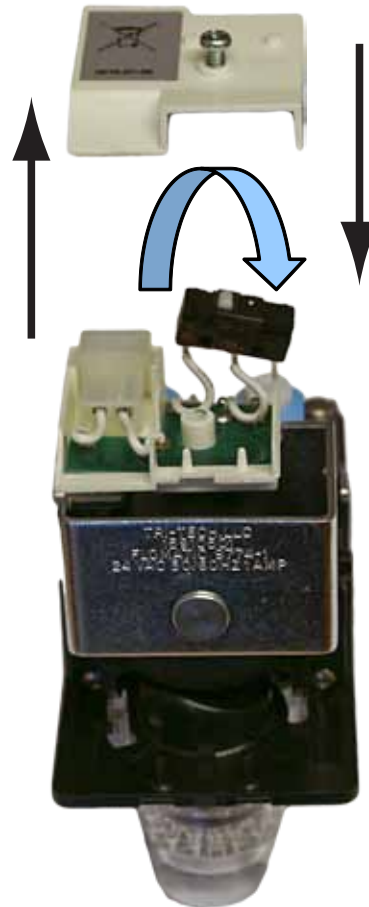

Mount the new cowl



Push button panel  
Item.no: 1610